


## Pushbutton Lock Instructions

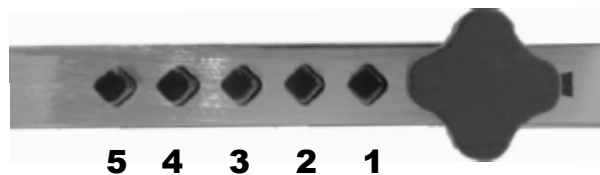

### To open your push button lock on the factory setting:

Make a habit of turning the knob left, (counter clockwise) before working the combination. Should anyone have attempted an improper combination this action clears off such an attempt and reactivates the buttons. Please note the lock knob features a clutch feature, if turned forcefully in any direction the knob will cycle to the next position without breaking the lock's shaft.

**STEP 1.** Push the # 2 and the # 4 buttons together,

**STEP 2.** Push the # 3 button,

**STEP 3.** Turn the knob right (clockwise about ¼ turn) to open.


**To lock:** Turn knob full left turn (counter-clockwise about ¼ turn) until it stops.

**DO NOT FORCE DOOR CLOSED:** If door does not close, open and check if contents are interfering with lock function.

**WARNING: The lock does not operate automatically: Close Lid, Locking knob must be turned in order to lock the Security Case.**

### To change your combination:

You may easily change to a new combination using one, all five, or any number of buttons you wish in any order. Two or more buttons may be pushed at one time as part of your new combination. Simple two and three button combinations are easy to remember and still provide security. Note: a particular button can be pushed only once in establishing a new combination. Record your new combination and store it in a safe place.

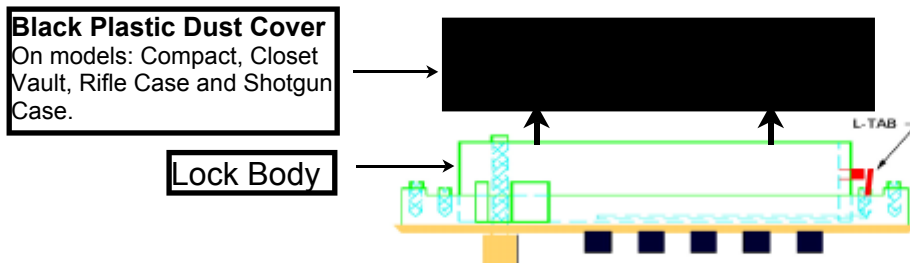

**STEP 1.** Open door, lift and remove the black plastic dust cover (if equipped) covering the lock body and relock the lock with the door open.

**STEP 2.** Press the correct buttons in the proper order for your existing combination, but **DO NOT TURN KNOB.**

**STEP 3.** At the end of the lock there is a "L" tab, push the "L" tab firmly toward the lock to engage the pin, then release.

**STEP 4.** Turn the knob about ¼ turn left (counter clockwise) to "clear-out" the existing combination.

**STEP 5.** Press the buttons firmly and deliberately in the desired sequence for your new combination

**STEP 6.** Turn the knob to the right about ¼ turn (clockwise) to set your new combination into the mechanism.

**STEP 7.** Turn the knob about ¼ turn left to lock the lock. Your new combination is installed.

**STEP 8.** Reinstall the black dust cover, then **CHECK THE NEW COMBINATION SEVERAL TIMES WITH THE DOOR OPEN BEFORE CLOSING THE DOOR, TO BE SURE YOU HAVE SET THE COMBINATION CORRECTLY.**

### **WARNING:**

**NEVER STORE FIREARMS AND AMMUNITION TOGETHER THE SAFEST PROTECTION AGAINST ACCIDENTS INVOLVING CHILDREN UNDER THE AGE OF 18 IS TO STORE YOUR FIREARM UNLOADED AND LOCKED, WITH THE AMMUNITION STORED IN A SEPARATE, LOCKED CONTAINER.**